



BF200 SERIES

Usage and Care Manual

Models: BF200, BF200D & BF200C

Your Partner in Cool.

AQUA
COOLER

INSTALLATION

1. All UrbanFF Fountains must be installed by a qualified plumber in accordance with National plumbing and drainage code AS/NZS 3500.1 and AS/NZS 3500.2 and any local authority codes.
2. Before Installation FLUSH ALL EXTERNAL LINES before connecting to fountain.
3. Provide adequate level surface for mounting fountain as specified in local area codes (approx. 1400mm square x 125 mm deep minimum concrete slab) and install an inground fixing cage (preferred method of installation) or alternatively (remove main access panel) and mark the anchor points for the fountain to be dyna-bolted or chemset in place after the concrete slab has been poured.
4. In BF200C catchment model water inlet through the slab at dimensions shown on Diagram A.
5. Remove the fountain from the packaging preventing scratching and damage.
6. All fountains have been checked for leaks as part of our quality assurance program and some droplets of water may be evident inside the packaging and/or unit. This is perfectly normal.
7. Remove access panel from fountain using 4mm allen key.
8. Mount the fountain in place aligning the base holes with the inground fixing cage/anchor markers and tighten the bolts.
9. Connect the 40mm waste outlet pipe to the waste water connection (BF200C Catchment model only)
10. If you have not flushed the external water inlet pipes – do it now! Flushing the water inlet pipes from the mains supply before connecting to fountain will help prevent blockage by any debris that may be in the external pipes.
11. Connect water supply to 1/2" BSP inlet
12. Test the bubbler by activating the button
13. Adjust bottle filler flow rate externally as required so mains water pressure (varies from city to city) is consistent.
14. Refer to trouble shooting guide if you experience any problems
15. Check all connections and waste piping to ensure they are tight and secure
16. Re-install the access panel once satisfied the fountain is installed correctly

IMPORTANT

**THIS UNIT MUST BE INSTALLED BY AN AUTHORISED PLUMBER
THE UNIT TO BE CONNECTED IN ACCORDANCE WITH
AS/NZS 3500.1 or AS/NZS 3500.2**


Attention Plumbers:

- This fountain uses "Push In Fittings". Failure to release these fittings correctly will result in leakage.
- These quick release fittings allow instant connection and disconnection without the use of spanners.

FEATURES AND SPECIFICATIONS


Specifications

- 3/8" bsb water inlet (15mm)
- 40mm waste outlet (BF200C Model only)
- Maximum Temperature: 40 c
- Maximum Water Pressure: 1000 kpa
- Complies with WMTS-105 Technical Specification: Appliances - Beverage dispensers and icemakers
- Complies with AS/NZS 4020 Testing of products in contact with drinking water

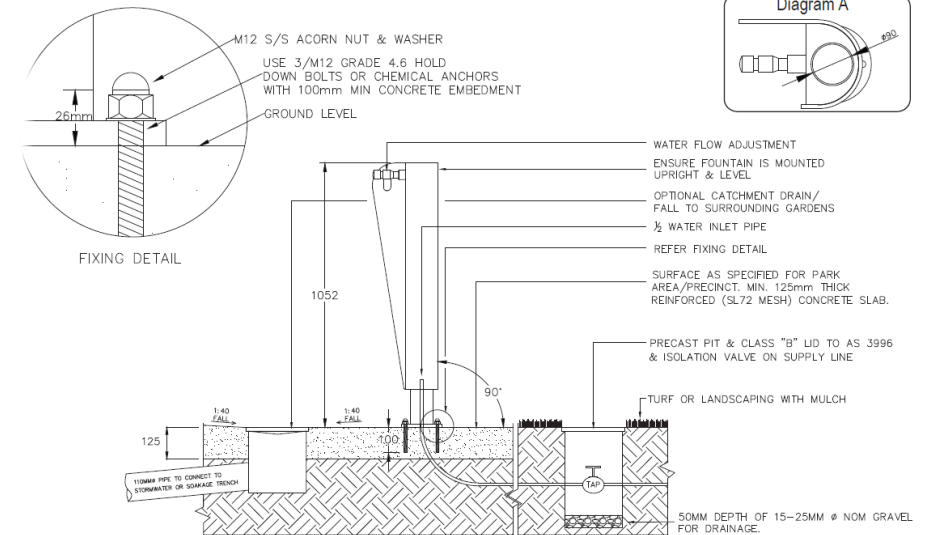


CARE & MAINTENANCE

 
1. Regular washing down of the exterior surface will help prolong the lustre of the painted finish.
2. Painted fountains that become dull due to prolonged exposure to direct sunlight can be restored with an appropriate surface polish.
3. To maintain the exterior of the fountain carefully remove any loose surface deposits with a wet sponge. Use a soft (non abrasive) brush and dilute a solution of mild detergent (eg. PH-neutral liquid hand washing detergent in warm water (DO NOT use solvents) to remove dust, salt and other deposits. Rinse thoroughly with clean fresh water to remove residues. To remove any Tea Staining on Stainless Steel surfaces we recommend Drifter Hull cleaner and stain remover.
4. Do not use any solvents on the surface as this will adversely affect the longevity of the painted finish.
5. Surface scratches and inconsistencies can be touched up using Dulux touch up paint. Most colours can be matched.
6. We recommend the use of anti-seize paste on all external fixing bolts to maintain ease of access over long periods of time.
7. Check the fountain internal connections, water flow and all external access screws and fixing bolts regularly (every 3mths) to ensure they are tight.
8. In high debris areas (parks, children's playgrounds etc) where there may be sand or bark or a lot of leaf litter that may be placed in to the basin, check regularly and remove debris to prevent blocking of the basin or the waste outlet pipe.
9. After any interruption to the water supply, always flush the lines prior to reconnection to the fountain to prevent debris entering the valve.



Model: BF200

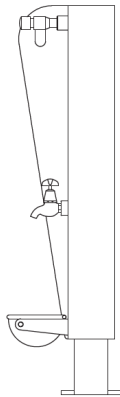

Model: BF200D

 

Model: BF200C

TRANSPORT AND STORAGE

Immediately upon receipt of the BF200 carefully inspect the unit for any damage that may have occurred in transit. Any such damage must be noted on the carrier delivery documents. It is the consignee's responsibility to make any claims on the carrier or respective insurance company. Any hidden damage should be reported to Aqua Cooler as soon as possible.

TROUBLESHOOTING & MAINTENANCE

There is restricted or no water flow? Check the inlet lines for kinks in the tubing. Ensure the water supply valve is fully open. Check the water pressure regulator is open.

The water continues to drip / run after shutting off? The most common cause of water not shutting off is a leaking valve and is due to the lines not being flushed adequately and debris getting in to the valve through the inlet and sitting on the rubber seals. To check the valve it will need to be removed. Please contact this office for details instructions to ensure this is done correctly.

The water flow is shooting over the top of the basin or is not high enough and trickling over the nozzle? The water pressure is too high / low and needs to be adjusted via the water flow regulator so it flows in to the catchment area of the basin.

Leaking from the internal connections? Check that they have been installed correctly. (all fountains are leak tested prior to leaving the factory). Have the push in fittings been pulled? (see instructions on how to connect and disconnect push in fittings). Is the water inlet connection tight?

WARRANTY

All outdoor drinking fountains are covered by a 2 year manufacturers guarantee against faulty materials and workmanship under normal wear and tear conditions.

All fountains are date stamped at the time of despatch. This warranty will only apply under the following conditions:

- The fountain was installed in accordance with our installation instructions that are supplied with every fountain.
- The fountain was installed by a licensed plumber
- The water lines have been thoroughly flushed prior to connection to the fountain
- The fountain has not been tampered with or repaired in any way without obtaining prior approval from our factory specialists first.
- The fountain has been serviced and maintained as per our supplied instructions.

The warranty is void if unit is modified in any way, misuse, faulty installation, water conditions and unauthorized persons working on the unit.

The warranty does not cover filters


If unit does not operate correctly, the unit must be sent back to the manufacturer's factory for replacement or repairs to the unit and customer to pay freight both ways

The company obligation per warranty is limited to repair or replacement of parts at the discretion of the company

(For disclaimer particulars contact manufacturer)

Aqua Cooler Pty Ltd reserves the right to amend this warranty or design at any time without notice.

Your Partner in Cool.



AQUA
COOLER

Your Partner in Cool.

Phone Numbers

Sales: 1300 278 226
Service: 1800 278 226

Address

U14, 2-12 Knobel Court
Shailer Park QLD 4128

Internet

www.aquacooler.com.au
info@aquacooler.com.au